 


Epson Settings for film Output

Go to: → Epson Artisan 1430
→ Printer Settings /Main

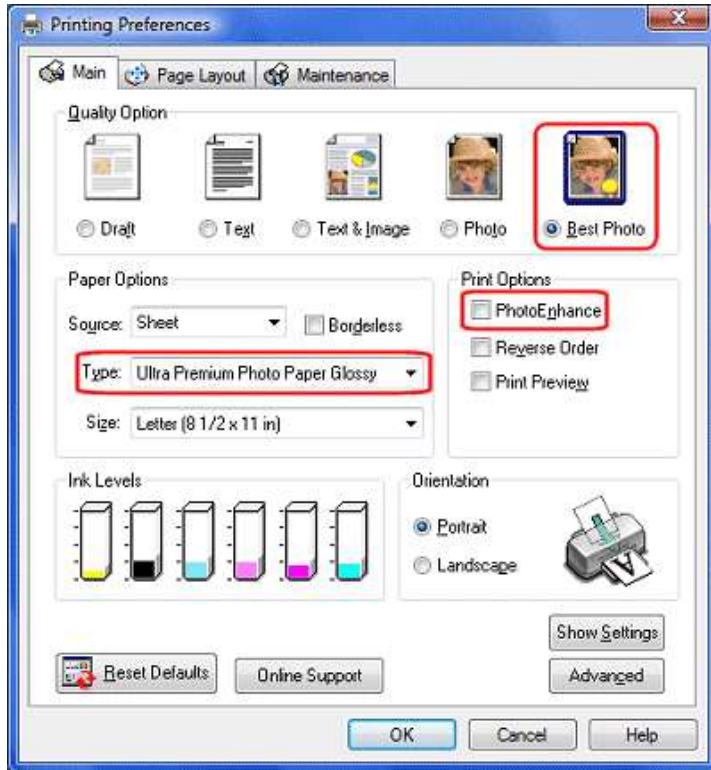

 
 
→ Quality:
Best Photo

→ Paper Options:
Ultra Prem. Paper Glossy

→ Pre Select Size:
Super B 13" x 19"

→ Print Options:
Black /Grayscale

Go to: → Advanced
→ uncheck the High Speed

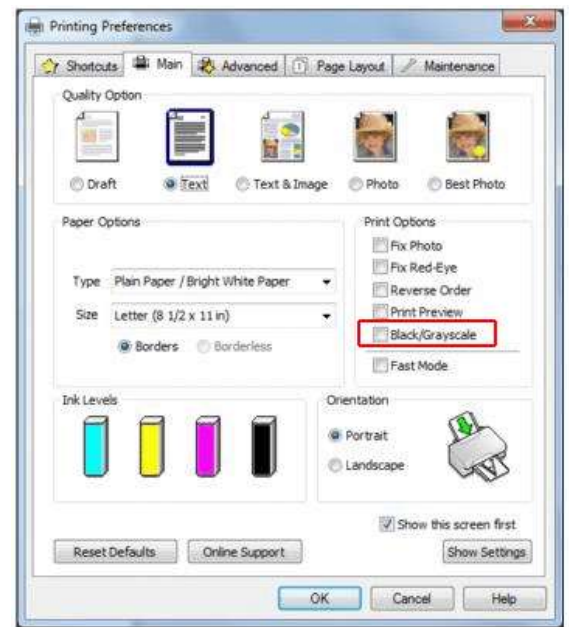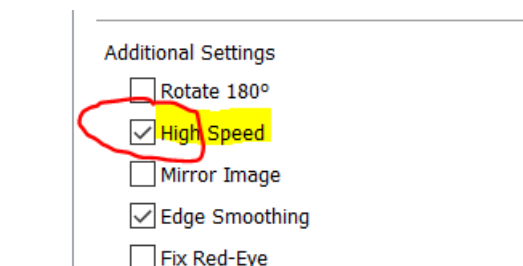

Florida Flexible Printing Products

2699 West 79 Street, Unit #1, Hialeah, Florida 33016

Tel: 305-512-2222 – www.floridaflex.com – sales@floridaflex.com